Controls Near the Steering Wheel

The two levers on the steering column contain controls for driving features you use most often. The left lever controls the turn signals, headlights, and high beams. The right lever controls the windshield washers and wipers.

The controls under the left air vent are for the moonroof and the cruise control.

The tilt adjustment lever on the underside of the steering column allows you to tilt the steering wheel.

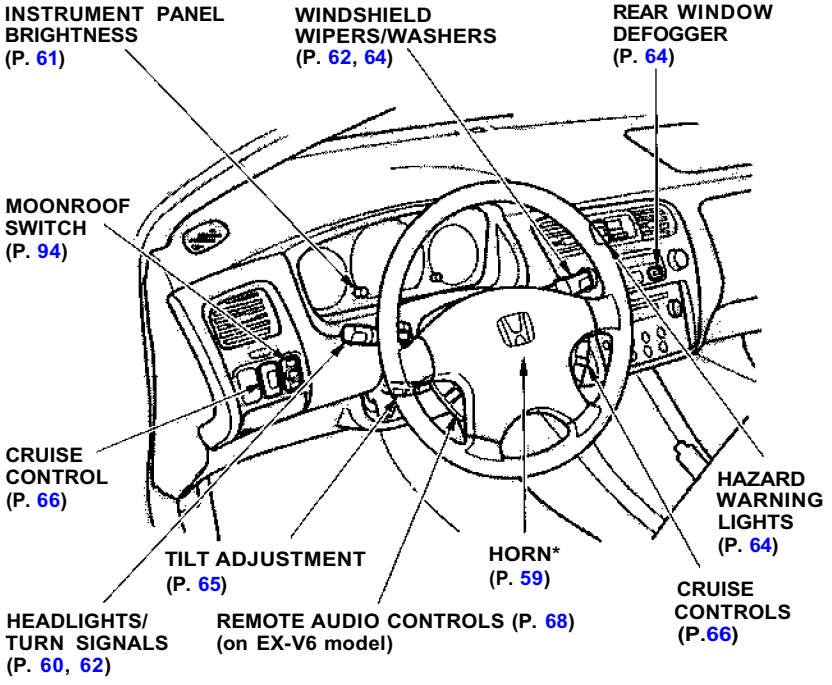
INSTRUMENT PANEL BRIGHTNESS (P. 61)
WINDSHIELD WIPERS/WASHERS (P. 62, 64)
REAR WINDOW DEFOGGER (P. 64)
MOONROOF SWITCH (P. 94)
CRUISE CONTROL (P. 66)
HAZARD WARNING LIGHTS (P. 64)
TILT ADJUSTMENT (P. 65)
HORN* (P. 59)
CRUISE CONTROLS (P.66)
HEADLIGHTS/ TURN SIGNALS (P. 60, 62)
REMOTE AUDIO CONTROLS (P. 68) (on EX-V6 model)

* To use the horn, press the pad around the "H" logo.

Controls Near the Steering Wheel

Headlights

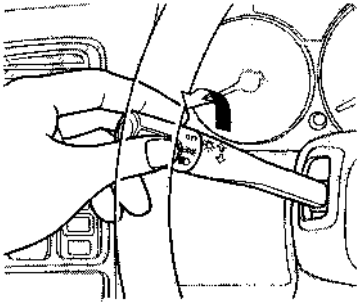

The rotating switch on the left lever controls the lights. Turning this switch to the " " position turns on the parking lights, taillights, instrument panel lights, side-marker lights, and rear license plate lights. Turning the switch to the " " position turns on the headlights.

If you leave the lights on with the ignition switch in ACCESSORY (I) or LOCK (0), you will hear a reminder chime when you open the driver's door.

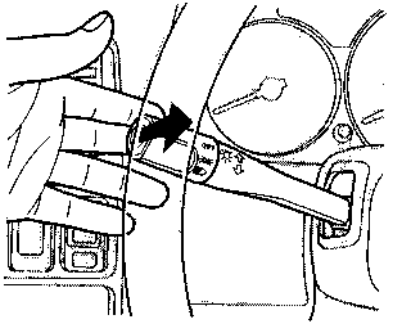

To change between low beams and high beams, pull the turn signal lever until you hear a click, then let go. The blue high beam indicator will light (see page 54).

To flash the high beams, pull the turn signal lever back lightly, then release it. The high beams will come on and go off.

The high beams will stay on for as long as you hold the lever back, no matter what position the headlight switch is in.